



# **PSP-V Ring Adapter**

## **Manual**

# Content

[Description](#)

[Package Contents](#)

[Installation Procedure](#)

[Legal Compliances and Disclaimers](#)

# Description

PSP-V adapters are designed to mount Krypton and Proton attachments in front of optical riflescope lenses on the Weaver/Picatinny rail.


The adapter is suitable for riflescopes with a lens diameter of 35–60 mm.

# Package Contents

- PSP-V adapter
- Hex wrenches (S0.9, S2.5)
- Torx T25 wrench
- 2 screws M4x10
- User manual
- Warranty card

# Installation Procedure


## Step 1. Loosen the screws

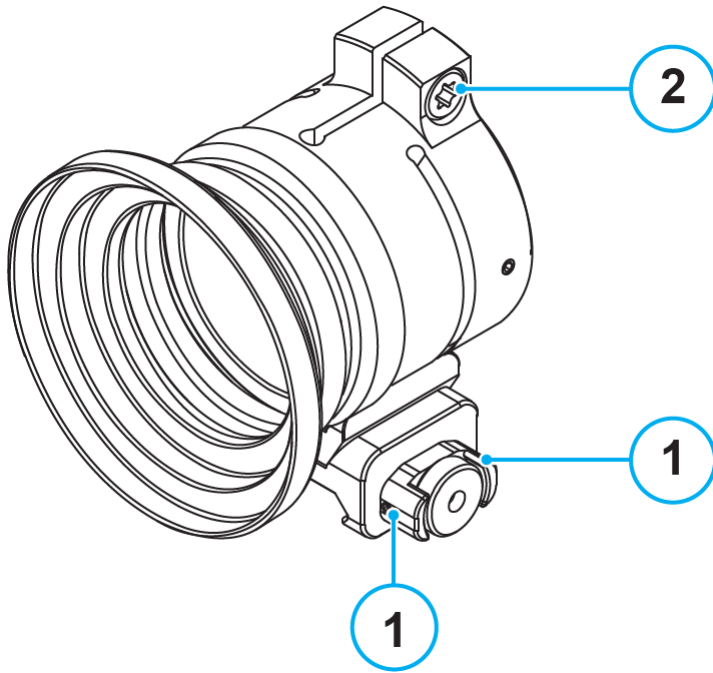

1. Loosen the fixing screws **(1)** with a hex wrench S0.9.
2. Loosen the screw **(2)** with a Torx T25 wrench.
3. Move the lever **(3)** to the OPEN position.

Image not found or type unknown




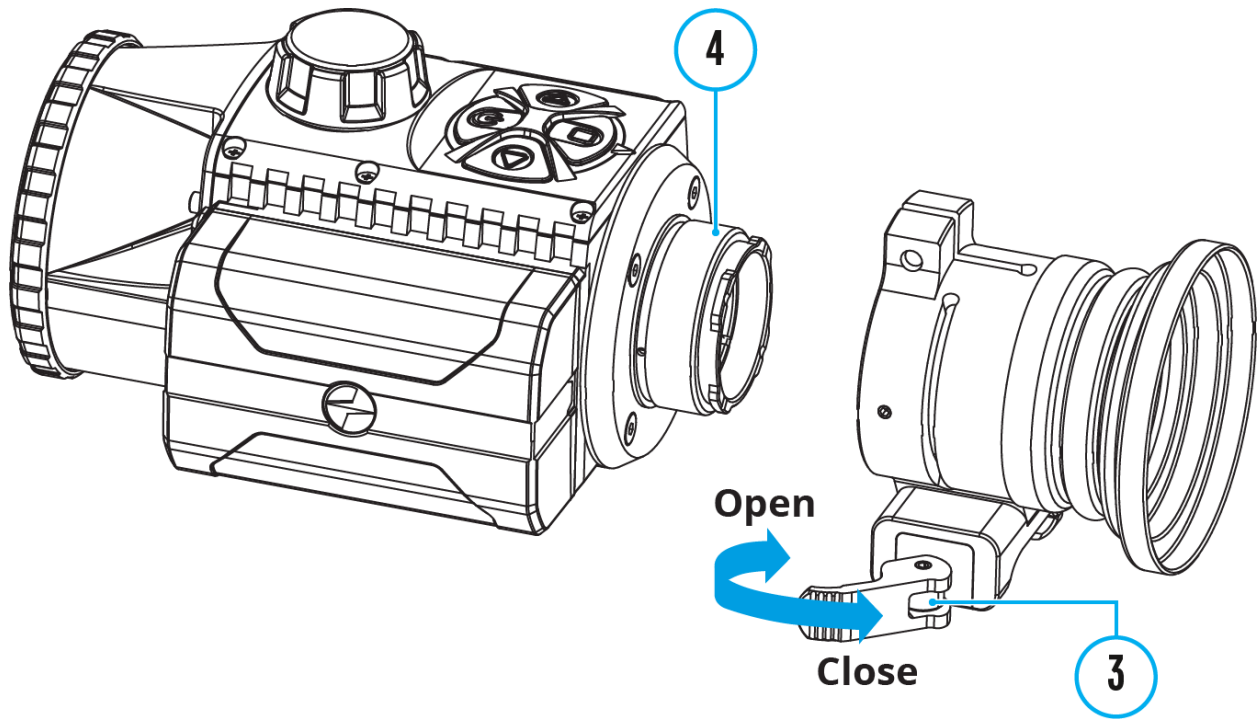

---

## Step 2. Mount the adapter on the attachment

1. Screw the adapter along the thread on the mount of the attachment **(4)** until the adapter is tight and secure with your thermal imaging attachment. To ensure the lever is in the correct position, rotate the adapter counter-clockwise until the lever**(3)** is on your left-hand side (see Figure).
2. Tighten the screw **(2)** until the ball joint in the adapter is tight.


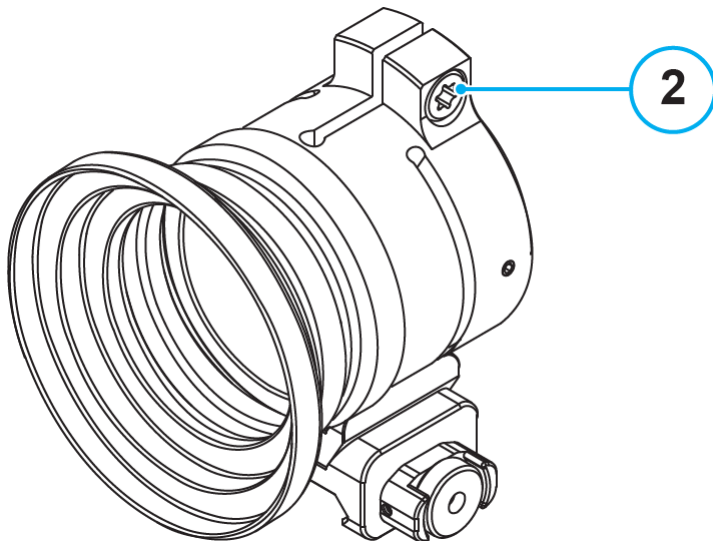


### **Step 3. Mount the attachment with the adapter on the weapon**

Image not found or type unknown





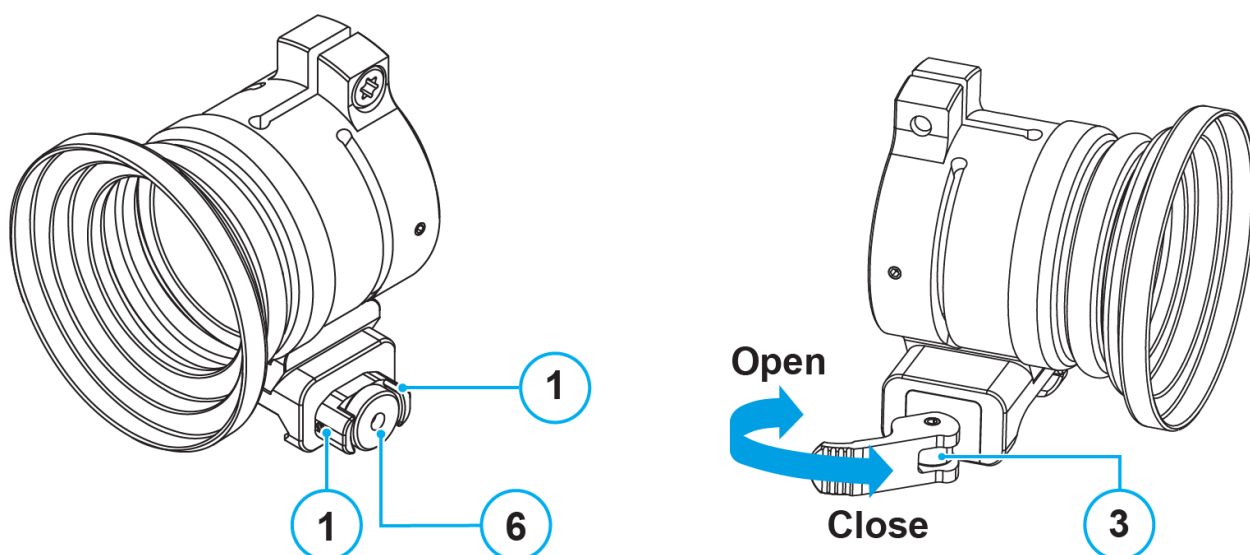
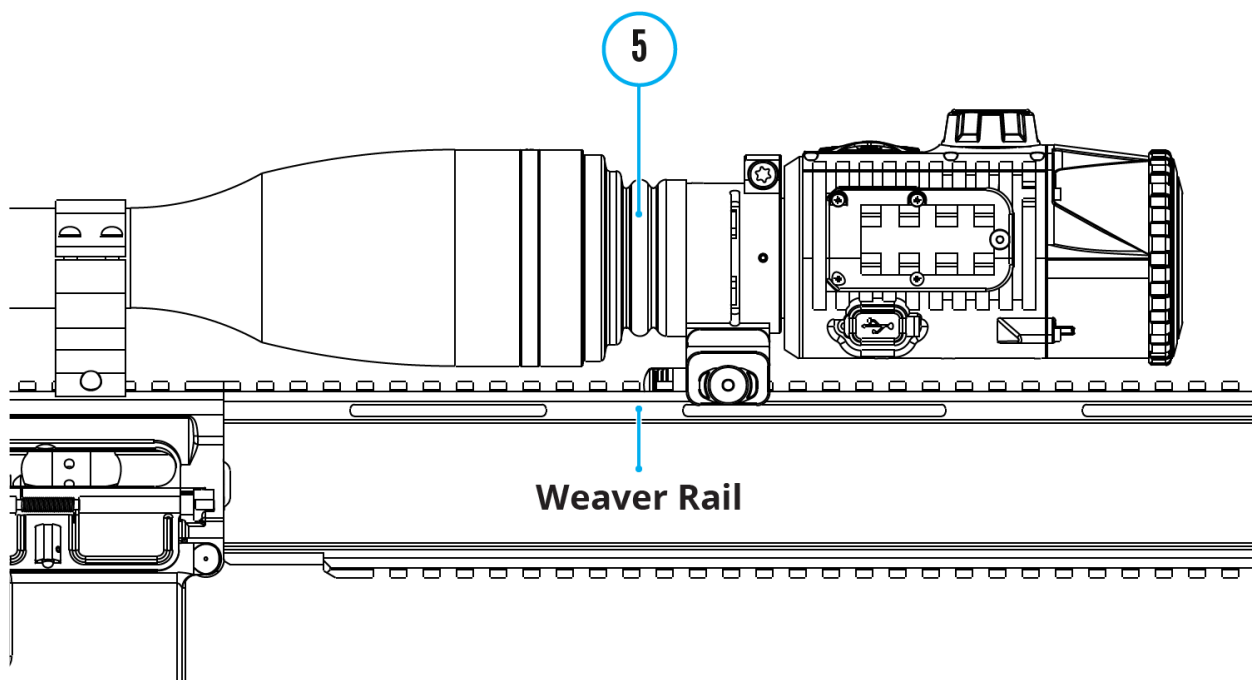


1. Mount the adapter on the weapon rail (Weaver/Picatinny) in front of the riflescope's objective lens. The adapter cover **(5)** should prevent external light sources from reaching the lens.
2. Tighten the adjusting wheel **(6)** until the lever **(3)** requires mild-to-medium level of resistance to close. Tighten or loosen the adjusting wheel **(6)** as needed so the adapter does not feel loose.
3. Move the lever **(3)** from its initial OPEN position to the CLOSED position.
4. Tighten the screws**(1)** until they are tight and secure.

---

#### Step 4. Adjust the attachment position


Image not found or type unknown

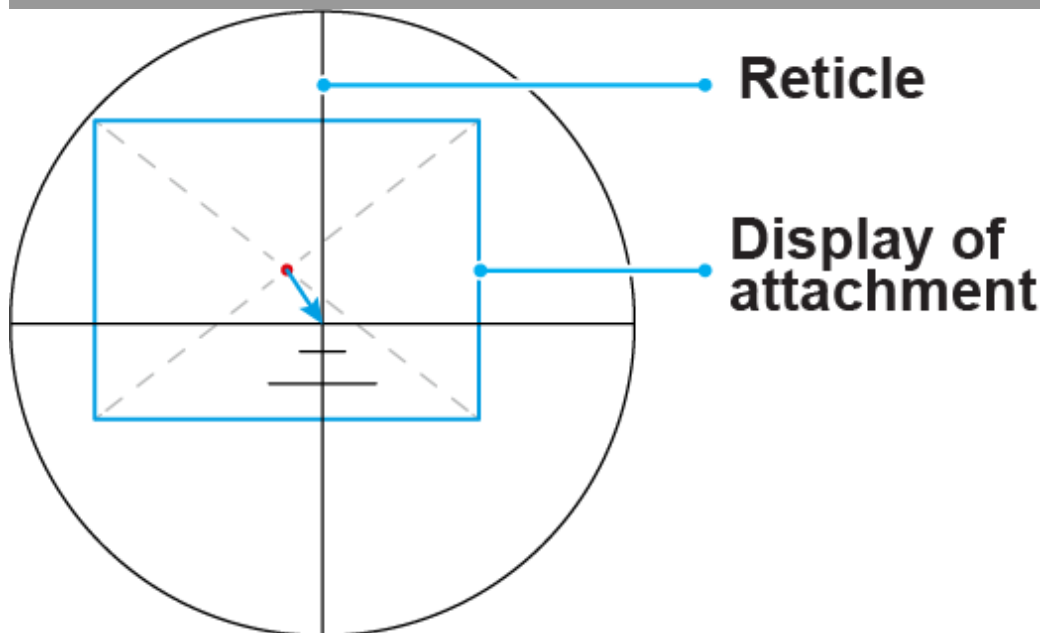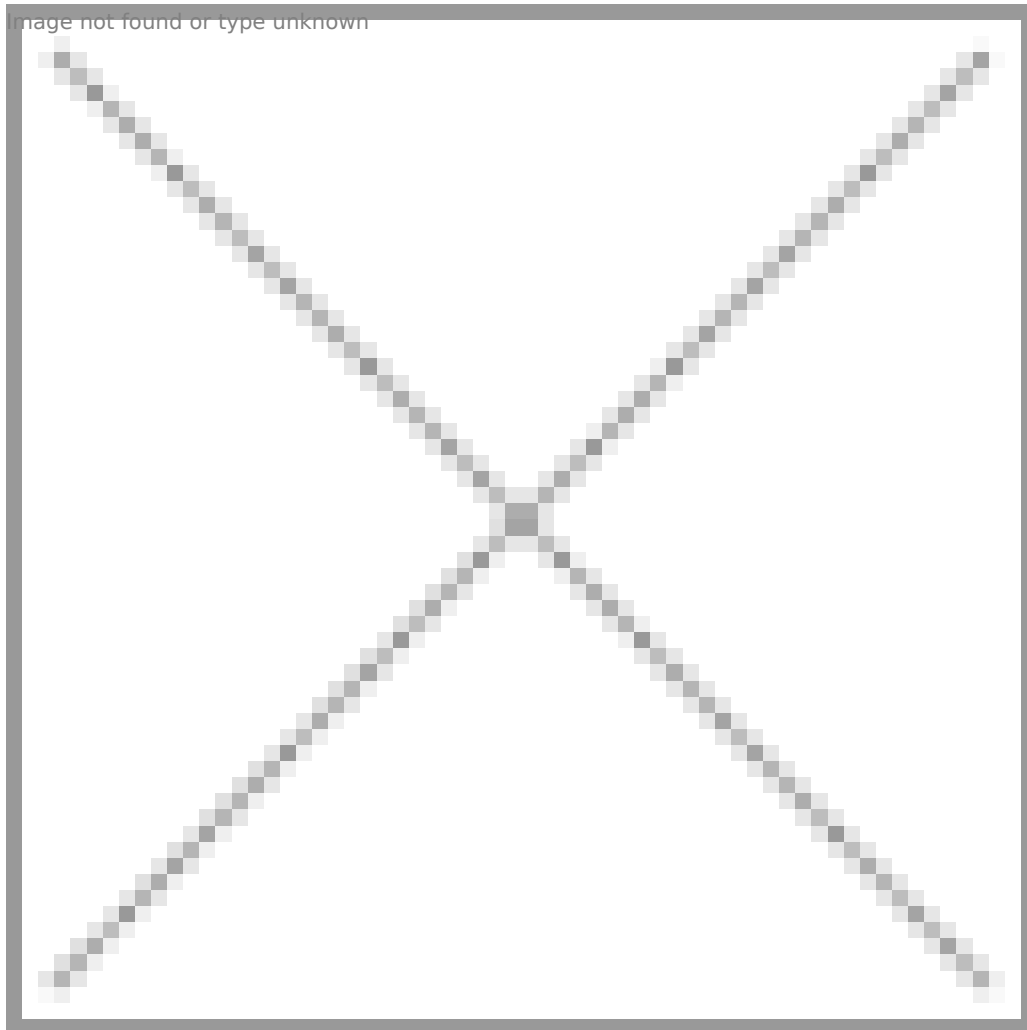

1. Turn on the attachment.
2. Align the display centre with the crosshairs of the riflescope reticle by tilting the attachment and observing through the eyepiece lens.
3. Align the riflescope's aimpoint with that of the attachment by rotating


the attachment clockwise or counterclockwise.


4. Having achieved the optimal attachment position, finally affix the attachment by tightening the screw **(2)** until it stops. The clamping force should be 8 Nm (7.81 in-lb) (use the torque screwdriver to check).

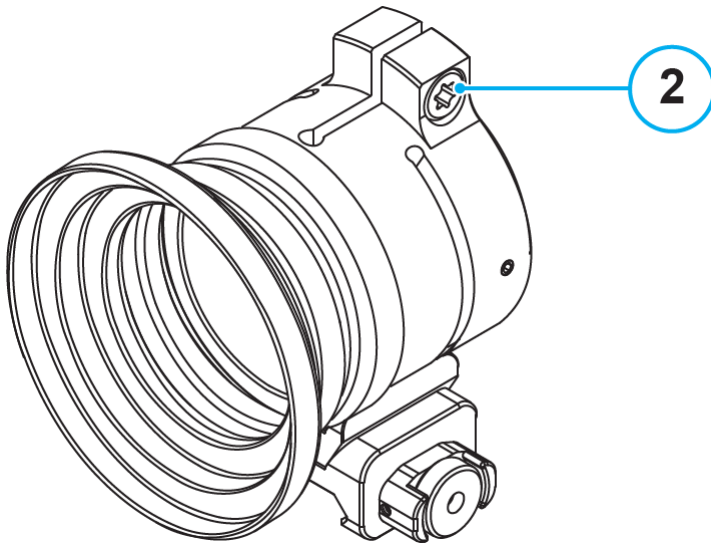

---


## Adjust the adapter height

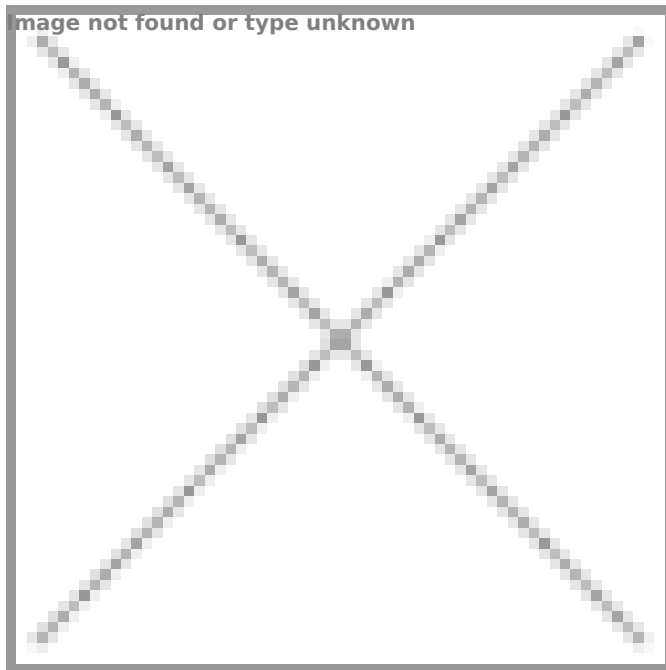

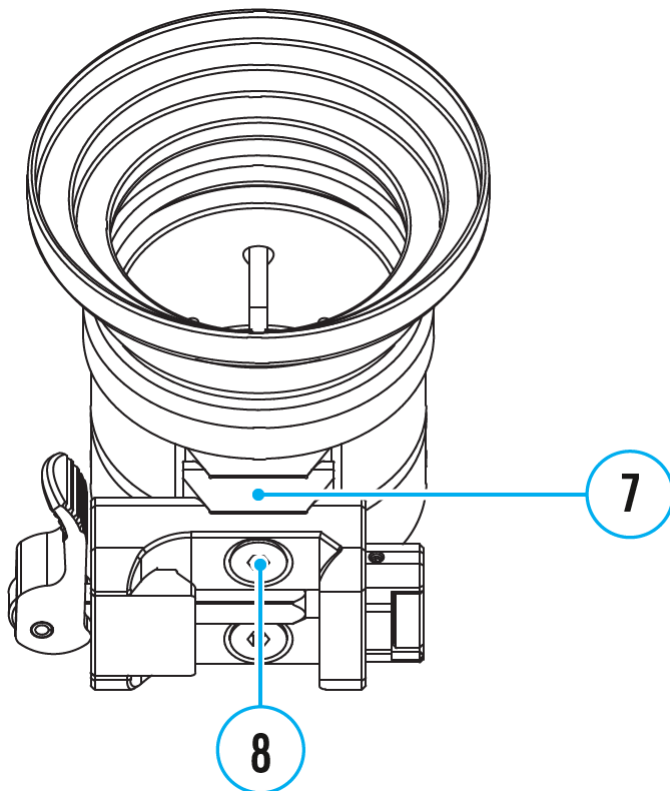

To mount the adapter on low profile riflescopes, remove the rail spacer **(7)**:

1. Unscrew the screws **(8)** using a hex wrench S2.5.
2. Remove the rail spacer **(7)**.
3. Fasten the adapter mount using the supplied screws M4x10.

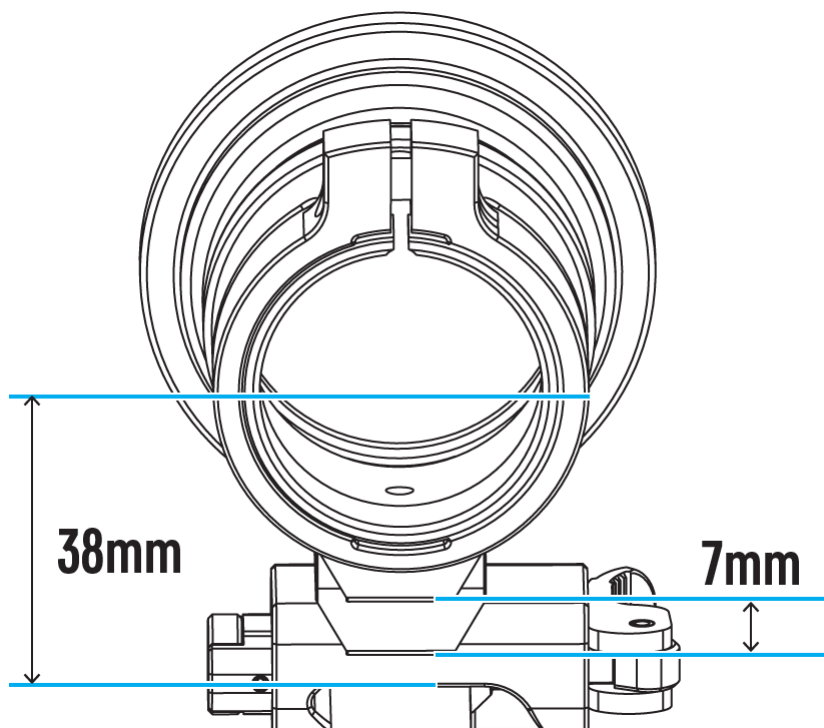

---

To further secure the adapter, it may be necessary to remove the screws **(8)**

and apply Loctite to them per the manufacturer's instructions. Loctite fully cures in 24 hours.

# Legal Compliances and Disclaimers

**Updates of the Product.** The manufacturer reserves the right at any time, without mandatory prior notice to the Customer, to make changes to the package contents (subject to the applicable laws, if any), design and characteristics that do not impair the quality of the Product.

**Limitation of Liability.** Subject to mandatory applicable laws and regulations: manufacturer will not be liable for any claims, actions, suits, proceedings, costs, expenses, damages or liabilities (if any), arising out of the use of this product. Operation and use of the product are the sole responsibility of the Customer. Manufacturer's sole undertaking is limited to providing the product(s) and related services in accordance with the terms and conditions of concluded transactions, including provisions established in warranty. The provision of products sold and services performed by Manufacturer to the Customer shall not be interpreted, construed, or regarded, either expressly or implied, as being for the benefit of or creating any obligation toward any third party (other than Distributor, Dealer, Buyer). Manufacturer's liability hereunder for damages, regardless of the form or action, shall not exceed the fees or other charges paid to Manufacturer for the product(s) and/or service(s).

MANUFACTURER WILL NOT BE LIABLE FOR LOST REVENUES OR INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY, OR PUNITIVE DAMAGES, EVEN IF THE MANUFACTURER KNEW OR SHOULD HAVE KNOWN THAT SUCH DAMAGES WERE POSSIBLE AND EVEN IF DIRECT DAMAGES DO NOT SATISFY A REMEDY.

---

For technical support please contact [support@pulsar-vision.com](mailto:support@pulsar-vision.com).

Answers to frequently asked questions about the devices can also be found in the **FAQ** section.